

Coal wagon thawing plant

The purpose of the coal wagon thawing plant is to allow coal to be dumped from the wagon on the wagon tippler. We achieve this goal by heating the walls of the wagon, which causes the coal layer to thaw from them. At the same time, we pay great attention to the temperature of wheels, bearings and axles, which for safety reasons must not be heated to too high a temperature.

